

INSTALLATION INSTRUCTIONS

Soft Touch Rev Control PN 8728

ONLINE PRODUCT REGISTRATION: Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration.

Note: This Soft Touch Rev Control, PN 8728, is designed for inductive style ignition systems only. It **cannot be used with an MSD Ignition Control!**

Parts Included:

1 - Soft Touch Rev Control	4 - Wire Splicers
4 - Mounting Pads and Sleeves	4 - Self Tapping Screws
4 - RPM Modules, 3,000, 6,000, 7,000, 8,000	4 - Wire Insulating Caps

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Note: The RPM limit is set with plug-in rpm modules. If an rpm module is not installed, there will be no rpm limit.

CYLINDER SELECT

The Soft Touch Rev Control comes from MSD programmed for 8-cylinder applications. It can easily be adjusted for operation on other engines by cutting the cylinder select wire loops (Figure 1). If the loops are cut, use the supplied insulating caps to seal the wire ends.

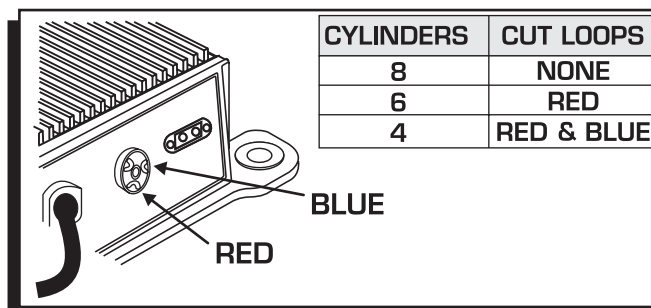


Figure 1 Selecting the Number of Cylinders.

MOUNTING

The Rev Control can be mounted in the engine compartment but away from direct heat sources. It is recommended to mount it where the rpm module is easy to access for rpm adjustments. Make sure all of the wiring reaches their connections. Once a suitable mounting location is determined mark the location of the mounting holes by using the unit as a template. Remove the unit and use an 1/8" bit to drill the holes. Install the supplied mounts and use the four self tapping screws to secure the Control (Figure 2).

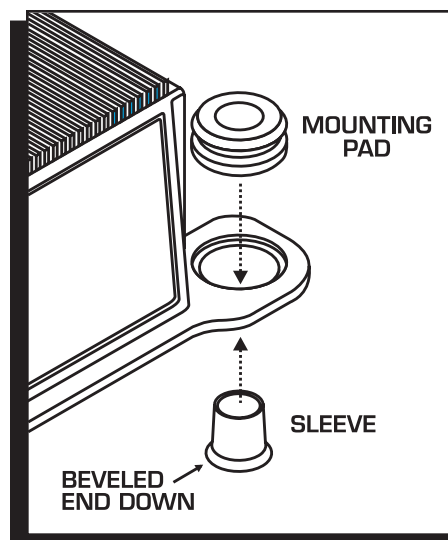


Figure 2 Installing the Vibration Mounts.

WIRING

WARNING: High voltage is present on the coil terminals. Do Not touch the coil terminals or tower when the engine is cranking or running.

Red	Connects to a switched 12 volt source.
Black	Connects to ground on the engine.
Green	Connects to the coil negative (-) terminal.

Trigger Pickup Wires

White	If the distributor is triggered by breaker points or an amplifier, this wire needs to be spliced to its trigger wire.
Violet	If the distributor uses a magnetic pickup, this wire needs to be spliced into the positive mag pickup wire.

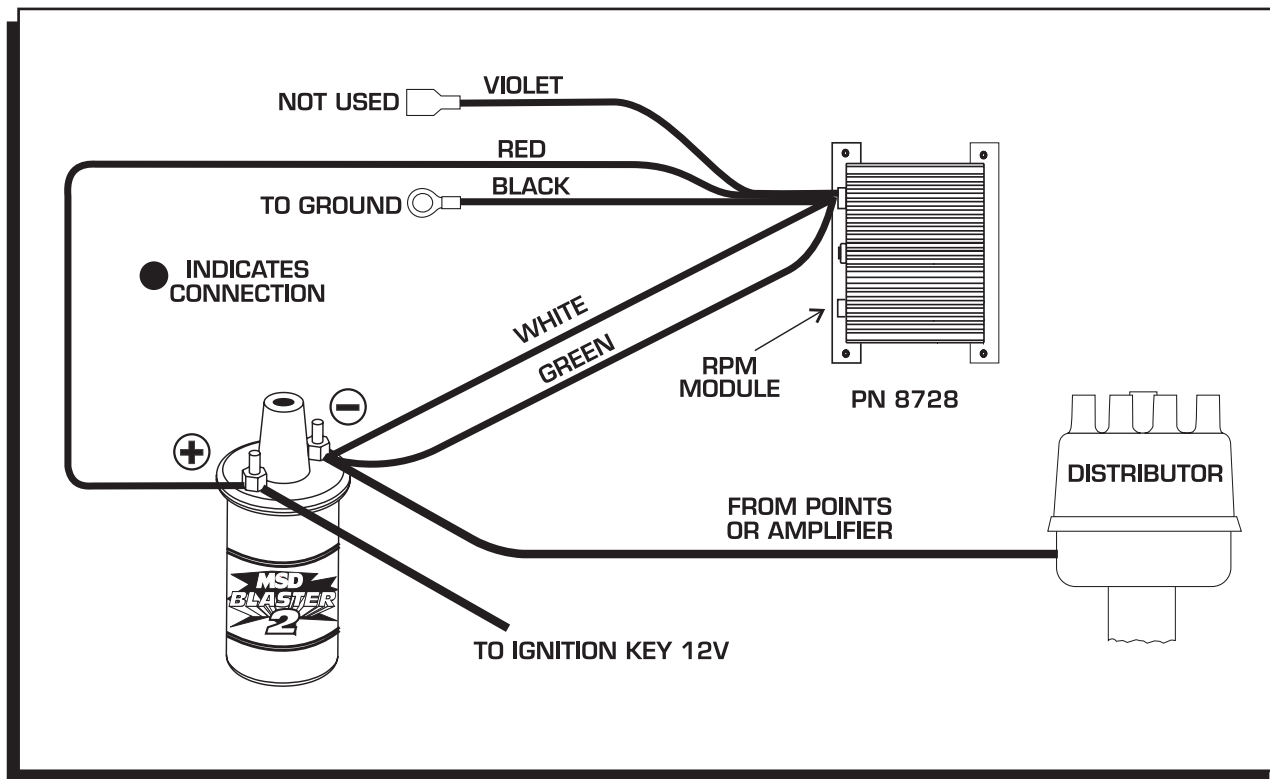


Figure 3 Wiring to a Points/Amplifier Ignition.

Note: The GM Unitized Coil, HEI Distributor was produced with several different modules. If this installation seems to cause a rough limit, try the wiring shown in Figure 5 below.

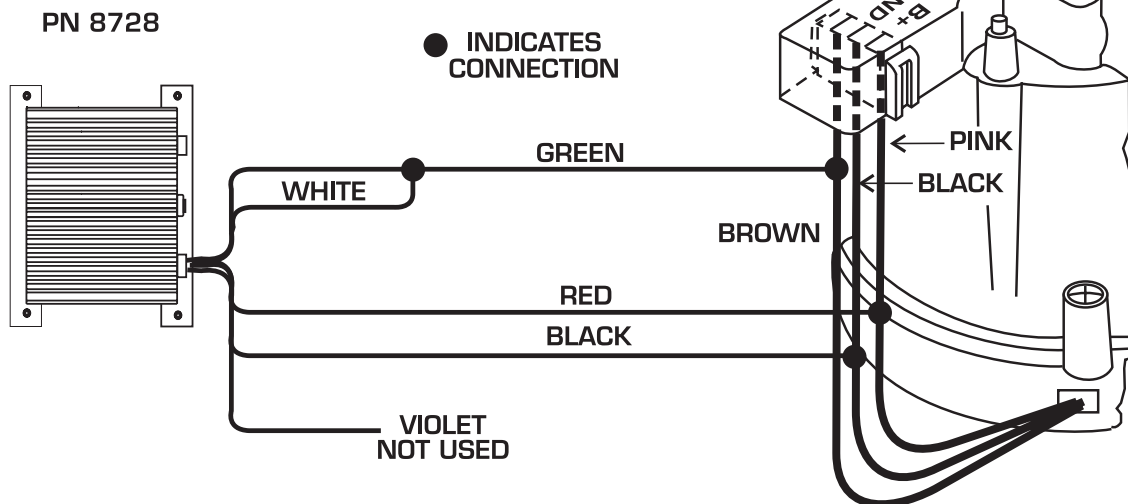


Figure 4 Wiring to a GM HEI Distributor, using the Module.

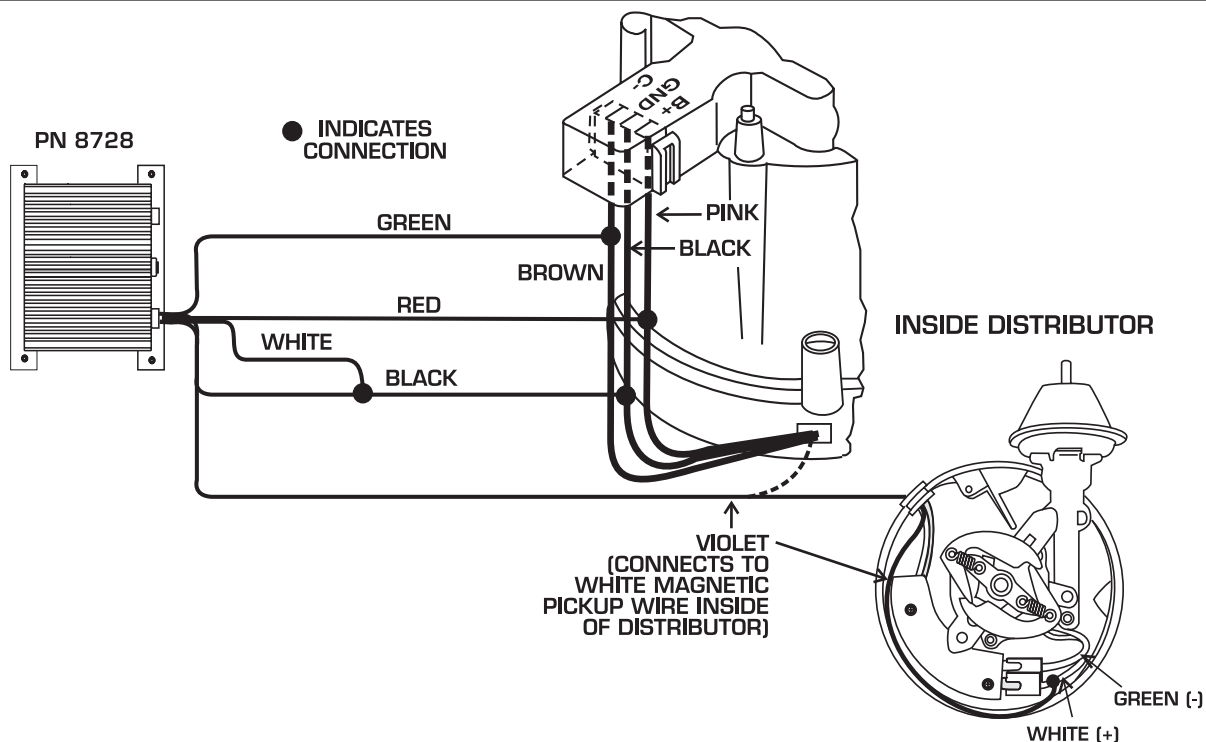


Figure 5 Wiring to a GM HEI Distributor using the Magnetic Pickup.

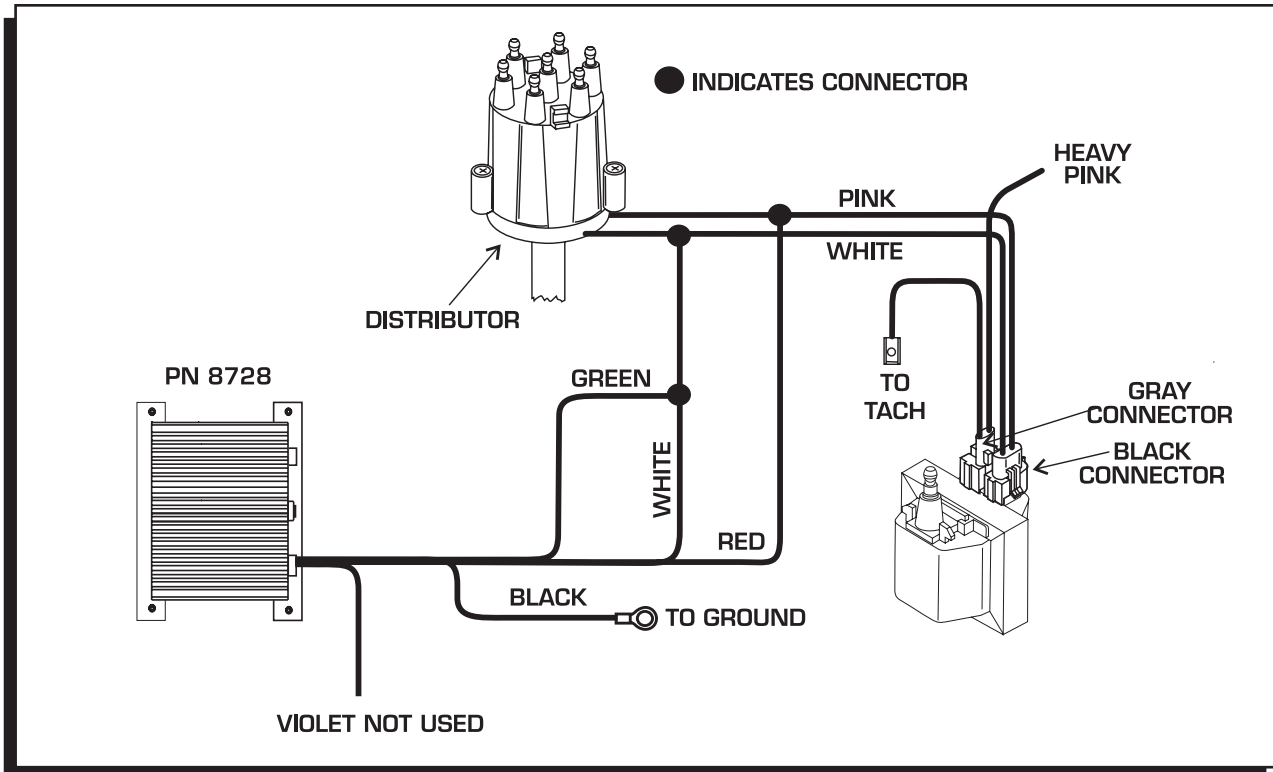


Figure 6 Wiring to a GM Dual Connector Coil System.

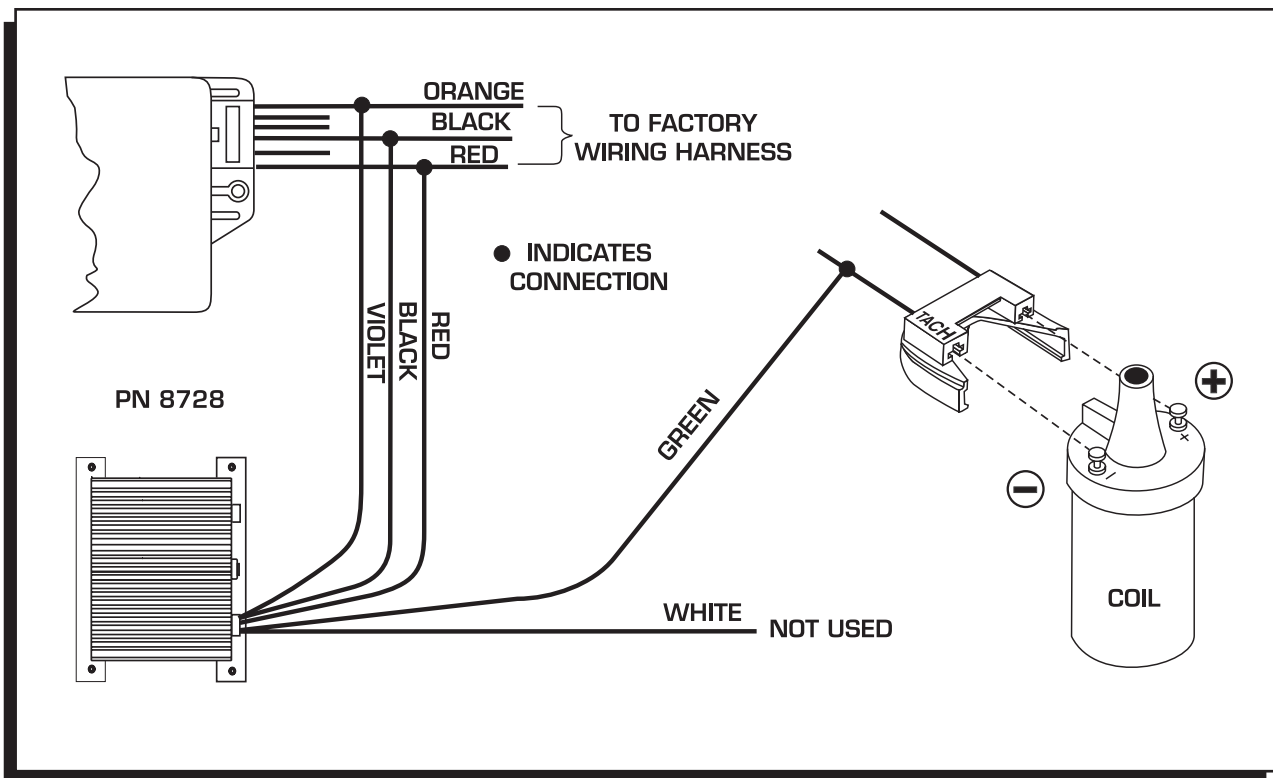


Figure 7 Wiring to a Ford Duraspark Ignition.

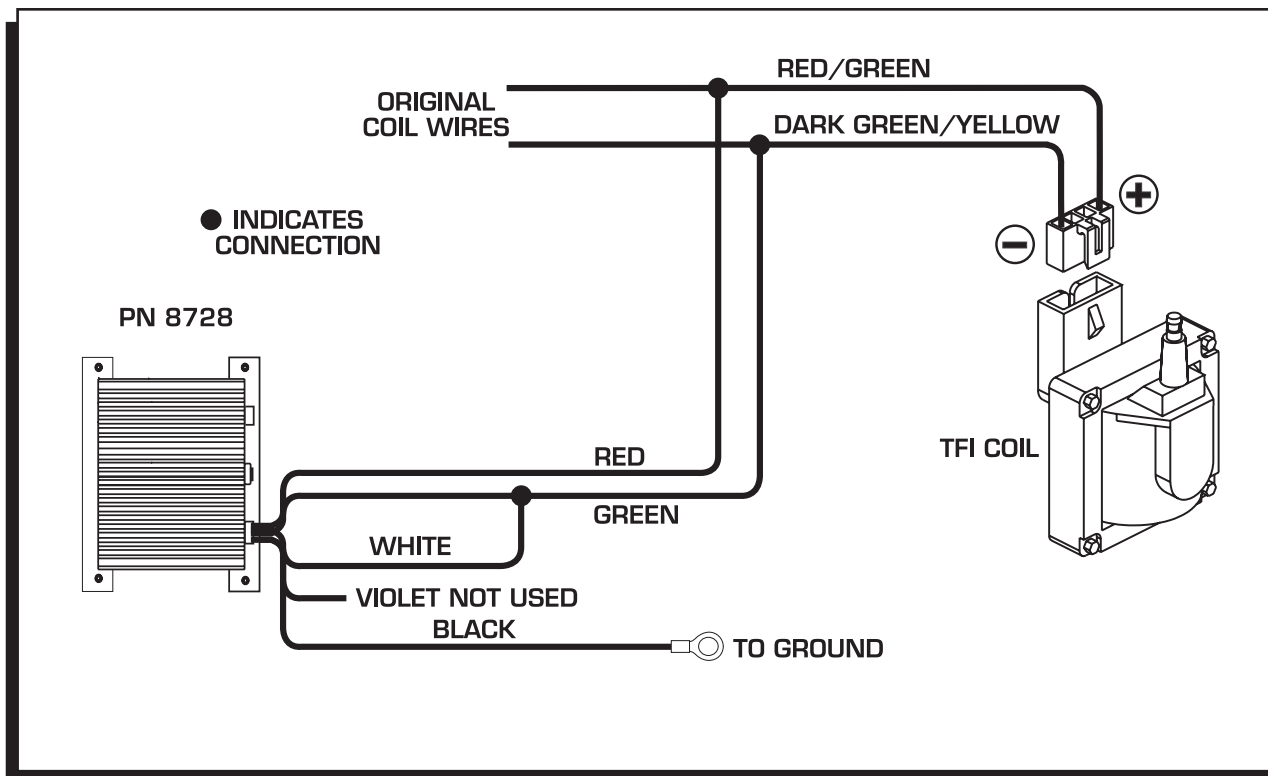


Figure 8 Wiring to a Ford TFI Ignition.

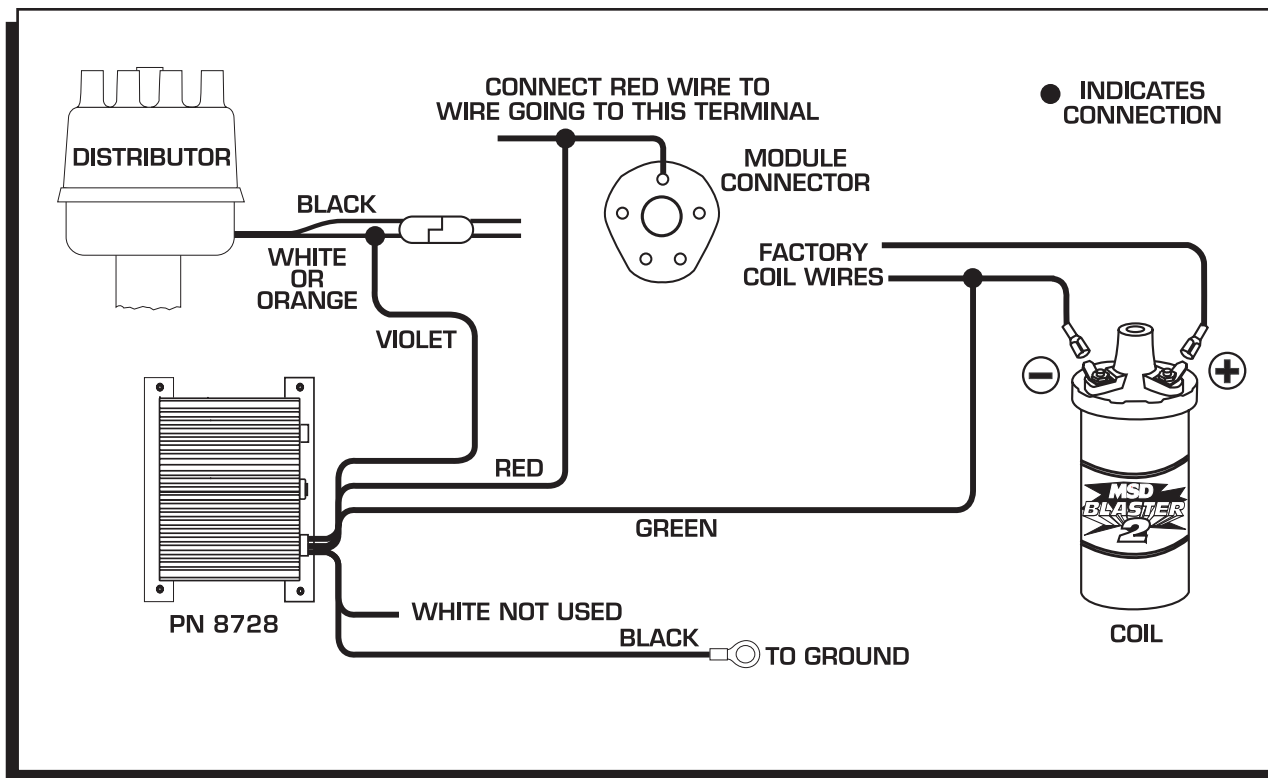


Figure 9 Wiring to a Chrysler Magnetic Pickup.

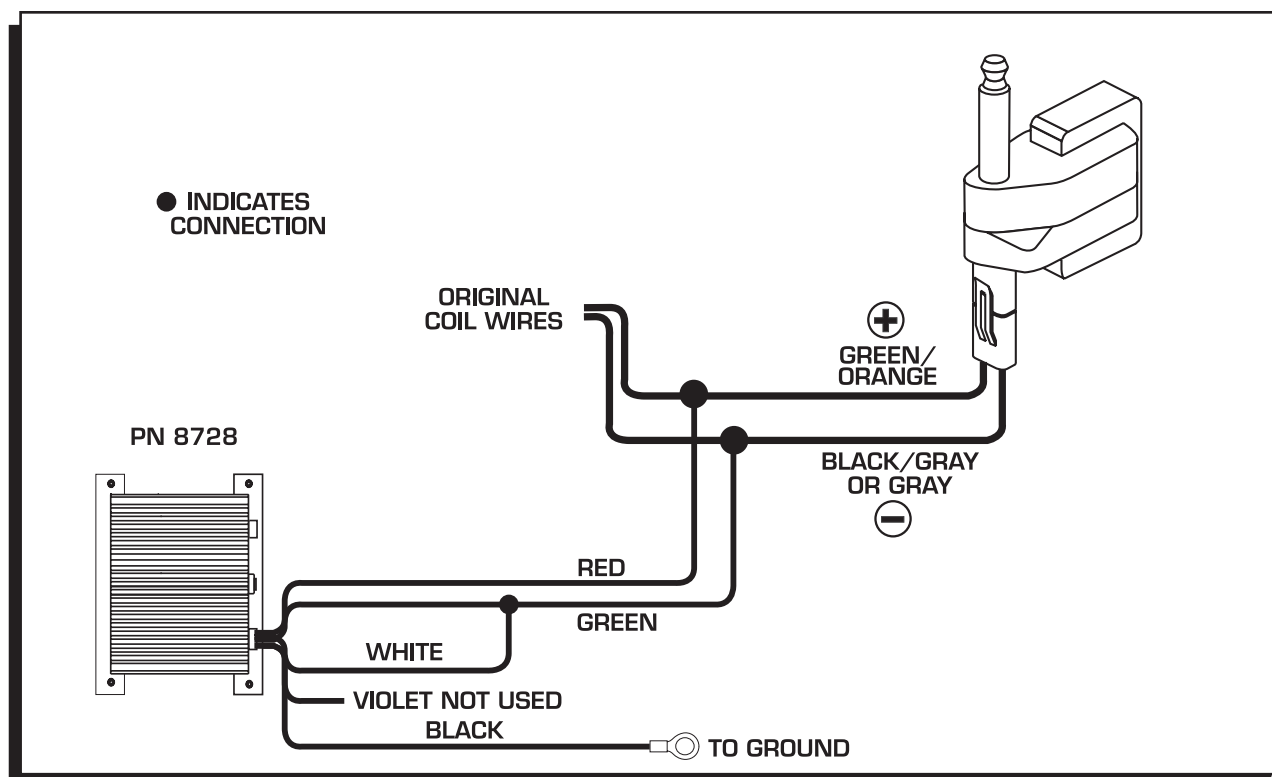


Figure 10 Wiring to a Late Model Dodge Ignition.

RPM MODULE KITS			
EVEN INCREMENTS		ODD INCREMENTS	
3,000-3,800	PN 8743	3,100-3,900	PN 87431
4,000-4,800	PN 8744	4,100-4,900	PN 87441
5,000-5,800	PN 8745	5,100-5,900	PN 87451
6,000-6,800	PN 8746	6,100-6,900	PN 87461
7,000-7,800	PN 8747	7,100-7,900	PN 87471
8,000-8,800	PN 8748	8,100-8,900	PN 87481
9,000-9,800	PN 8749	9,100-9,900	PN 87491
10,000-10,800	PN 8750	10,100-10,900	PN 87501
11,000-11,800	PN 8751	11,100-11,900	PN 87511
12,000-12,800	PN 8752	12,100-12,900	PN 87521
13,000-13,800	PN 8753	13,100-13,900	PN 87531

Kits are supplied with five modules in 200 rpm increments.

RPM MODULE SELECTORS	
3,000-5,200	PN 8670
4,600-6,800	PN 8671
6,000-8,200	PN 8672
7,600-9,800	PN 8673
9,000-11,200	PN 8674
10,600-12,800	PN 8675

RPM Selectors feature a dial that allows you to choose between 12 different rpm limits in 200 rpm

[illegible]



This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 5:00 p.m. Monday - Friday (mountain time).

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD. Any modifications to this item or if it is used on an application other than what MSD markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD will accept no liability for custom applications.