



INSTALLATION INSTRUCTIONS

Part Number BM-1204

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N Filtercharger® seals properly.

INSTALLATION

1. Remove the stock air filter.
2. Carefully clean the air box base and the intake snorkel sealing surfaces.
3. Apply a thin layer of the provided K&N Sealing Grease to the K&N Filtercharger®. (Fig. 1)

Note: This will help with the installation of the intake snorkel.

3. Install the K&N Filtercharger® into the air box.
5. Install the intake snorkel.

Note: It may be necessary to “rock” the intake snorkel from left to right while pushing down. (Fig. 2 and 3)

6. Reinstall both clips that secure the intake snorkel to the air box. (Fig. 4)

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

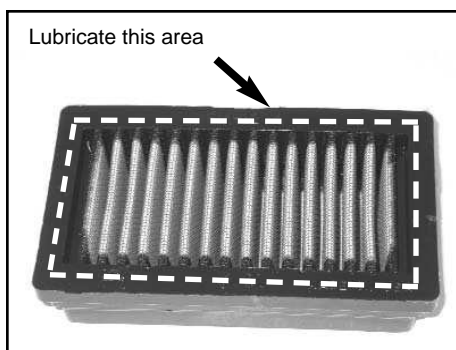


Fig. 1

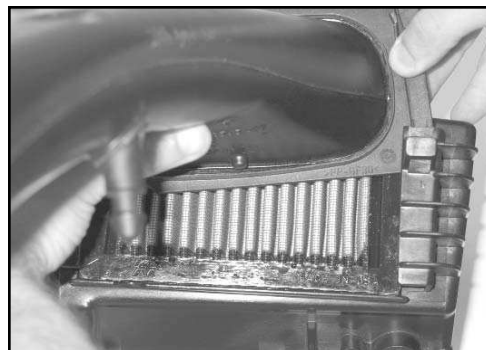


Fig. 2

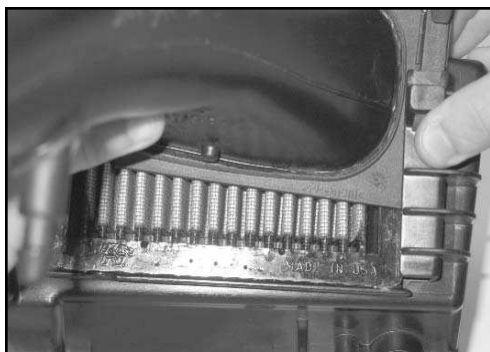


Fig. 3

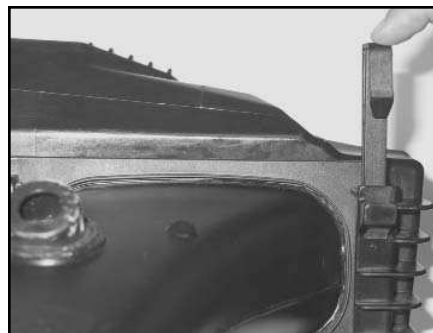


Fig. 4