

**44433**  
**11-13 Chrysler**  
**300**



**44433**  
**11-13 Chrysler**  
**300**

**11-13 Chrysler 300**  
**Sport Series Mesh Grille (overlay)**  
Install time: 30 Mins.

**TOOLS REQUIRED:**

Pliers  
Socket Wrench

**PARTS LIST:**

(1) Sport Grille (9) 6/32 1/2" Machine Screws  
(9) 6/32 Nylon Lock Nuts  
(9) L-Brackets  
(9) Threaded J-Hooks



**FOR OVERLAY**

USE PG.2 IF YOU WOULD LIKE TO INSTALL THE GRILLE WITH THE INSERT METHOD

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

**Step 1**

- Remove the Plastic Ribbs from the Grille. (Fig. 1)

**Step 2**

- Place Sport Mesh over the Factory Grille. (Fig. 2)
- Insert Threaded J-Hooks on corners and middle through the Mesh Grille to latch on. (Fig. 3)
- Place L-Bracket behind Threaded J-Hook to Latch onto Factory Grille. (Fig. 4)
- Thread with 6/32 Nylon Lock Nut.

**Installation Complete**



Fig 1



Fig 2

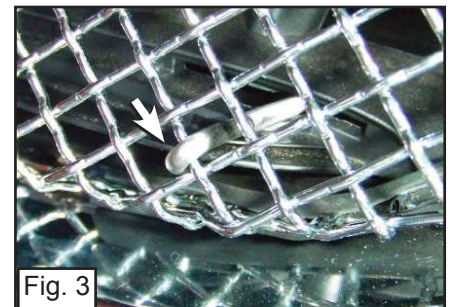


Fig. 3



Fig 4



**11-13 CHRYSLER 300C**  
**Sport Series Mesh Grille (Insert)**  
Install time: 30 Mins.

**TOOLS REQUIRED:**

Plastic Prybar  
10mm & 7mm Socket Wrench  
3/16 Drillbit & Drill  
Screwdriver

**PARTS LIST:**

(1) Sport Grille  
(9) 6/32 Nylon Lock Nuts  
(9) 6/32 1/2' Machine Screws

**FOR INSERT**



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

**Step 1 Factory Grille Shell Removal**

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

**Step 2 Factory Grille Removal**

- Remove 2 Clips on the Bumper Support. (Fig. 8)

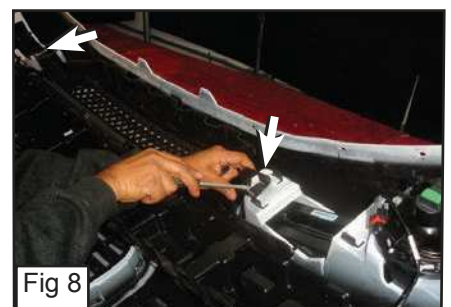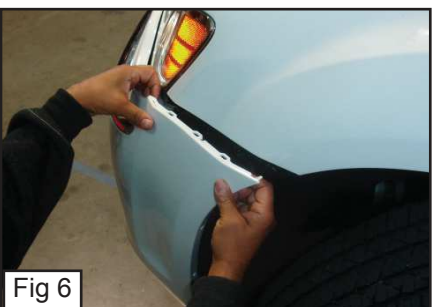

**44433**  
**11-13**  
**Chrysler 300C**



**44433**  
**11-13**  
**Chrysler 300C**

## **11-13 CHRYSLER 300C**

### **Sport Series Mesh Grille**

- Remove 2 Screws on the corners of the Grille Shell. (Fig. 9)
- Remove 11 Clips around the Grille Shell. (Fig. 10)
- Remove Factory Grille. (grille will come out forward.)

#### **Step 3 Grille Installation**

- Unclip the Factory Grille from around the Chrome Frame. (Fig. 11)
- Place Mesh Grille through the Chrome Frame. (Fig. 12)
- Hold in place the Mesh Grille so it wont move around (Do not put Mesh Grille too far out or too far in the Chrome Lip). (Fig. 13)
- Drill a 3/16 Hole through the Brackets on the Mesh Grille. (Fig. 14)
- Insert 1/2" Machine Screws through the Brackets and thread with 10/32 Nylon Lock Nuts. (Fig. 15)

Place Grille Back into Factory Grille Shell Opening.  
Re-Assemble Bumper Support, Clips and bolts.

Installation Complete

