



TOOLBOX MODEL INSTRUCTIONS

(This cover fits most 20" to 21" over the rail tool boxes)

READ THIS BEFORE STARTING INSTALLATION

REMEMBER TO USE PROTECTIVE EYEWEAR

STEP 1 - Set toolbox 20" from front of pickup box header. (See illustration 1) Use weather seal to seal gap at front between toolbox and pickup box header. **NOTE:** If gap is too large for weather seal, use alternative filler sources (not supplied with kit).

STEP 2 - (See illustration 2)

a) Place toolbox header bar tight against wall of toolbox.

b) Flush with top of pickup box. Apply pressure to compress rubber seal against toolbox, hold and clamp tight with clamps in two pack. Note: Save 6 or 8 pack clamp package for cover rails.

STEP 3 - Peel backing off from "L" weather seal and adhere seal to edge of header bar from end to end. (See illustration 2)

STEP 4 - Set side rail in place, so the front edge of side rail is even with edge of header bar. (See illustration 2 & 3) If rail is 1/4" from tailgate, but overlaps the header bar at front, cover will still fit.

Installation tip: For best protection, use silicon seal at front of rail and header bar along side of box (not supplied with kit).

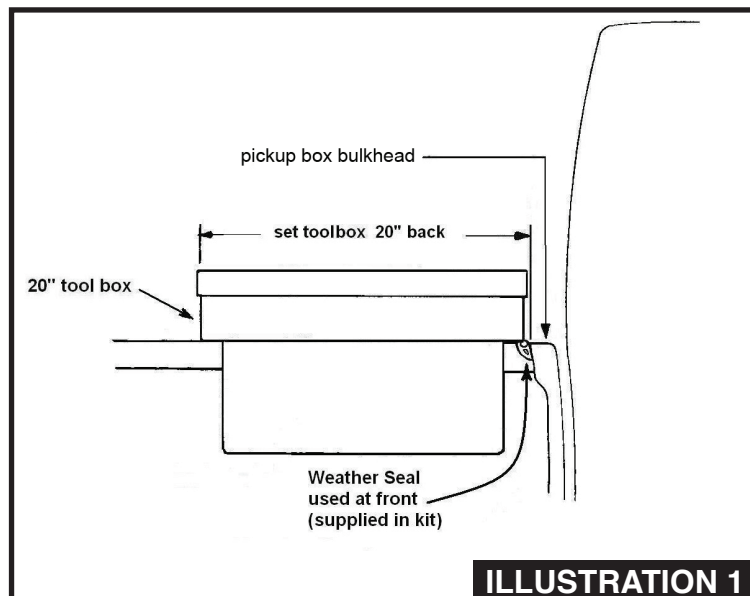


ILLUSTRATION 1

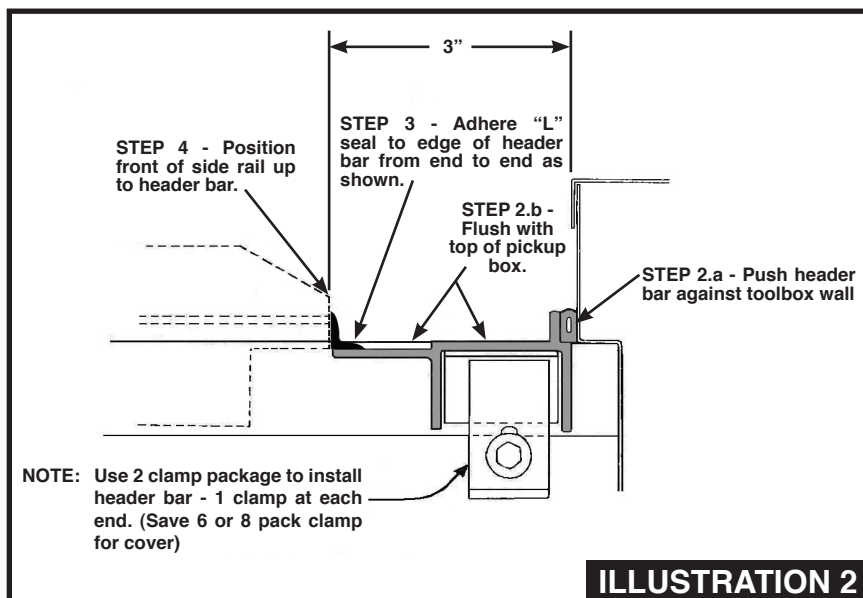


ILLUSTRATION 2

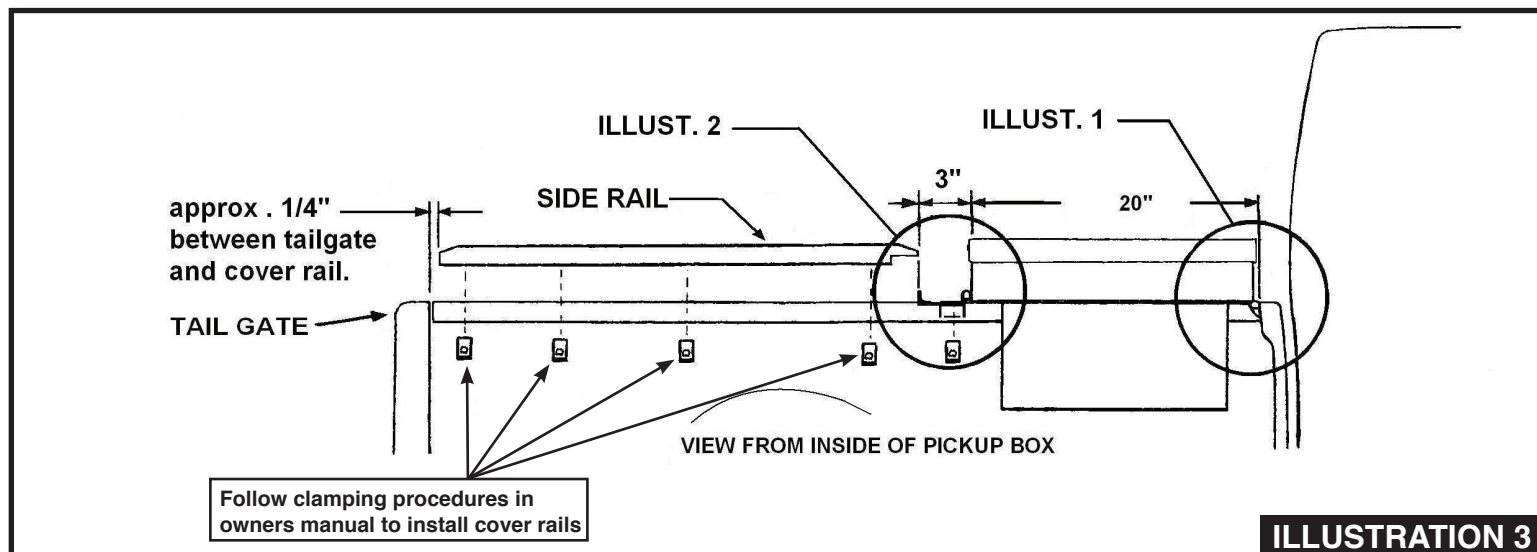


ILLUSTRATION 3