




Description: LED Taillight  
Part Number: 311010 - 311011 - 311012  
Application: 99-02 Chevy Silverado / 99-06 GMC Sierra



Tools Needed:  
Phillips Screw Driver

Step 1: Lower the tail gate exposing the two screws.


Step 2; Remove the upper and lower screws

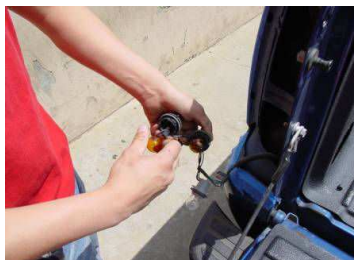

Step 3: Remove the taillight by pulling straight out.

Step 4: Remove all 3 sockets from the taillight housing.

Step 5: Remove the bulbs from the two black sockets.

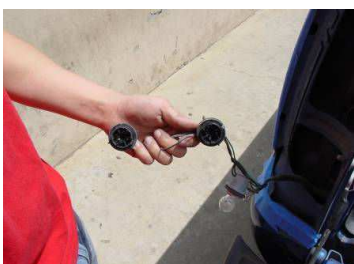

Step 6: Place the resistor in a safe location in the housing.

Step 7: Connect the pigtails to the stock sockets.



Make sure the wires match:  
Black to Black



Step 8: Connect the resistor  
to the taillight housing.



Step 9: Place the LED taillight  
into the truck housing, secure  
with screws.



Make sure all functions are  
working properly before  
driving.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.