



[www.anzousa.com](http://www.anzousa.com)

14885 Monte Vista Avenue  
Chino, Ca. 91710  
888.360.3696



Read complete instructions  
before installation!  
Improper installation may  
void warranty

Description: LED Taillights  
Part Number: 311022 - 311023 - 311024  
Application: 2004-2008 Ford F-150



Tools Needed:  
8mm socket.

Step 1: Open tailgate exposing  
the two 8 mm screws which hold  
the taillight to the body.



Step 2: Pull the taillight assembly  
straight out of the housing.

Step 3: Twist and pull the green  
and black socket out of the  
taillight assembly.




Step 4: Remove the black socket  
from the vehicle harness.

Step 5: Plug the harness to  
the ANZO LED taillight socket.



Step 6: Install the green socket into the ANZO taillight assembly.

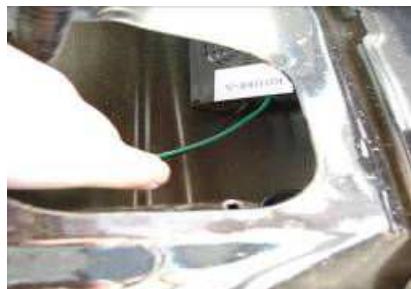

Step 7: Install the resistor in a safe place out of the taillight way



Step 8: Plug the resistor to the taillight.



Step 9: Install the taillight in to the housing of the truck using the two 8mm. Screws.



Step 10: Make sure all functions are working properly before driving.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.