



Installation Instructions
Part number 851033 & 851034
ANZO USA 52" A-PILLAR MOUNT

Parts included

- DRIVER SIDE BRACKET
- PASSENGER SIDE BRACKET
- FOAM PADS

PLEASE READ THROUGH THESE ENTIRE INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION ON YOUR VEHICLE. IF YOU ARE UNSURE YOU CAN DO THIS YOURSELF PLEASE LOCATE A QUALIFIED INSTALLTION CENTER TO HAVE YOUR PARTS INSTALLED.

IMPORTANT NOTICE

ANZO USA IS NOT RESPONSIBLE FOR COSTS FOR DAMAGE TO PAINT OF THE VEHICLE OR PARTS.

TO INSTALL YOU WILL FIRST REMOVE THE BACKING FROM THE FOAM PADS AND PLACE THEM AS SHOWN IN EITHER FIGURE 1 OR 2 DEPENDING ON WHICH PART NUMBER YOU HAVE. THE FOAM PADS ARE PROVIDED TO PROTECT YOUR PAINT FROM BEING SCRATCHED. FIGURES ARE ON THE FOLLOWING PAGE.

THIS PRODUCT HAS BEEN DESIGNED FOR USE WITH ANZO USA'S 52" LIGHT BAR PART NUMBER 881030. THE USE OF OTHER LIGHT BARS MAY REQUIRE MODIFICATION TO THE BRACKETS IN ORDER FOR THEM TO FIT. MODIFICATION OF THE BRACKETS IS NOT RECOMMENDED AND WILL NOT BE WARRANTIED IF MODIFICATIONS ARE MADE TO IT.

TO INSTALL THE BRACKETS ONTO THE VEHICLE YOU WILL SIMPLY REMOVE THE STOCK BOLTS ON THE A-PILLAR. DO NOT DISCARD THE BOLTS AS YOU WILL BE RE-USING THEM TO INSTALL THE BRACKET. SOME MODELS MAY REQUIRE THE USE OF LONGER BOLTS BUT THIS IS USUALLY NOT THE CASE.


WHEN INSTALLING THE BRACKET LEAVE THE BOLTS SLIGHTLY LOOSE SO WHEN YOU INSTALL THE 52" BAR YOU CAN MAKE ANY ADJUSTMENTS YOU MAY NEED TO. AFTER YOU HAVE MOUNTED THE LIGHT BAR YOU MAY START TO TIGHTEN EVERYTHING UP MAKING ANY ADJUSTMENTS YOU MAY NEED TO ALONG THE WAY.

THE WIRES ON THE LIGHT BAR TYPICALLY ROUTE THROUGH THE DRIVERSIDE DOOR JAM.

JEEP JK – THE WHITE LINES ON THE BRACKET INDICATE THE PLACEMENT OF THE FOAM PADS.



JEEP TJ - THE WHITE LINES ON THE BRACKET INDICATE THE PLACEMENT OF THE FOAM PADS.

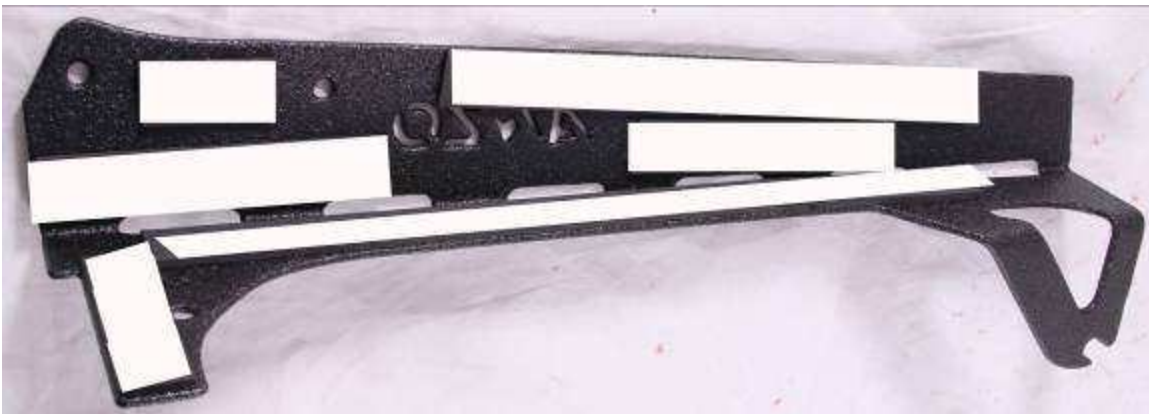

ANZO warranties against manufacturing defects for 1 year from date of purchase. Return defected product directly to place of purchase with proof of purchase receipt or invoice.

For additional assistance
Please call our customer service at
888.360.3696