

# ***BEDRUG, Inc.***

## **BEDRUG® MAT INSTALLATION INSTRUCTIONS**


**WARNING: IMPROPER INSTALLATION WILL RESULT IN MAT FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!**

APPROXIMATE INITIAL INSTALLATION TIME LESS THAN 15 MINUTES

1. (2) Loop fasteners are sewn to the BedRug Mat. Attach the hook fasteners that have a self-adhesive backing to the loop fasteners.
2. Lay the BedRug Mat in the bed of the truck to determine the exact location and fit.
3. Roll one side of the Mat up exposing the floor area where the strip of hook fastener is to be adhered.
4. If the vehicle has a spray in liner, scuff the areas where the hook fasteners are to be attached using steel wool or sandpaper. This must be done to provide a very rough surface for the adhesive to adhere to.
5. Using a cloth, soap and water, clean and dry this area thoroughly removing all dirt and debris. With a separate cloth, clean the area again with alcohol. Once the area has been cleaned with alcohol, apply the adhesive promoter to a lint free cloth then apply a thin layer to surfaces that have a spray in liner. **THE ADHESIVE PROMOTER IS NOT REQUIRED AND SHOULD NOT BE USED FOR APPLYING HOOK FASTENERS TO PAINTED SHEET METAL.** Allow the promoter to dry before adhering hook fasteners. \*See adhesive promoter information on the promoter package.
6. Remove the protective liner exposing the adhesive and lay the Mat down and **FIRMLY** rub the fastener down **VERY AGGRESSIVELY** to assure full engagement of the fastener and the adhesive.  
**NOTE: TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENER TO ACHIEVE MAXIMUM ADHESION. ALSO, NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.**
7. Repeat for the opposite side of the Mat.

### **LOOP FASTENER LOCATIONS**

2 pcs. on the floor of the BedRug.

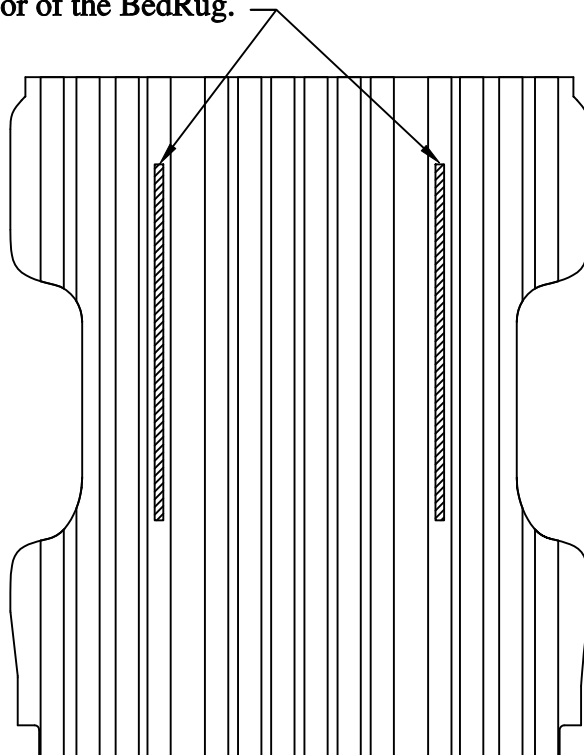

# BEDRUG<sup>®</sup> CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

## Cleaning your BedRug is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
2. Although most acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call BedRug Inc. customer service at 800-462-8435.

**Retain this cleaning information with your vehicle owner's manual for future reference.**

## LIMITED WARRANTY

BedRug Inc. warrants BedRug<sup>®</sup>, BedTred<sup>™</sup>, VanRug<sup>™</sup>, and VanTred<sup>™</sup>, for pickup trucks and vans to be free from defects in materials and workmanship. BedRug Bedliners will be warranted for the duration of the vehicle ownership by the original BedRug purchaser. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Customer modifications and/or improper return packaging of the product may void this warranty. Product should be cleaned before return. For warranty instructions, returns and packaging contact BedRug Inc. Customer Service at 800-462-8435. Labor and shipping are not covered under the terms of this agreement.

**Retain this warranty information with your vehicle owner's manual for future reference  
FOR WARRANTY SERVICE CALL 1-800-462-8435**

## PRODUCT REGISTRATION

Thank you for purchasing your BedRug product! We would appreciate it if you would take a few minutes to register your purchase. Registration allows us to provide, with your permission, important updates, service information, helpful hints or warranty service should you ever require technical support. BedRug offers the option of returning product registration forms electronically, rather than having to fill them out by hand. You can be assured that BedRug does not share or sell the information you provide. Save a copy of your sales receipt. Activate your warranty by registering your product online at <http://www.bedrug.com/customer-service/product-registration.html> or by scanning the QR code. You will need the 6-digit lot and date code found on the underside of the tailgate, see example.



PN **TGC07**  
DESC 07+ GMT900 TAILGATE  
WO#511247 LOT # 123456  
DATE: 04/13/12 TR# S1E123  
MADE IN USA