



11563 INSTALLATION INSTRUCTIONS



Safety glasses should be worn at all times while installing this product.

YEARS: 2019-PRESENT

MAKE: NISSAN

MODEL: KICKS

STYLE: CUV



WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY
For more information log onto www.curtmfg.com & for helpful towing tips log onto www.hitchinfo.com

WEIGHT CARRYING:

TRAILER WEIGHT: 2,000 LBS.
TONGUE WEIGHT: 200 LBS.

WARNING:

ALL NON-TRAILER (WHEEL-LESS) LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS. PLEASE SEE THE CURT CATALOG OR VISIT US ONLINE AT WWW.CURTMFG.COM FOR FURTHER INFORMATION.

PRO INSTALL TIME: 45 MIN.

NOVICE INSTALL TIME: 90 MIN.

IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

INSTALLATION TIPS:

1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
4. NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 800.798.0813

LEVEL OF DIFFICULTY: MODERATE


EASY

MODERATE

CHALLENGING



NO DRILL




TEMPORARILY REMOVE PARTS

VEHICLE PHOTO:



REPRESENTATIVE PHOTO

HITCH ILLUSTRATION:

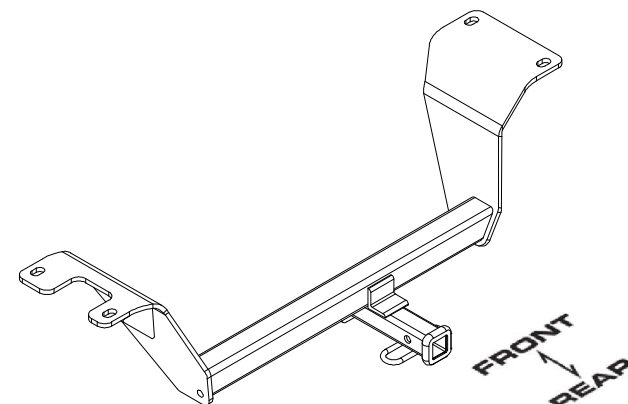

MAKE SURE YOUR HITCH MATCHES



SCAN FOR MORE INFO


PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND
CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.
For more information log onto www.curtmfg.com

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.

2/8/2019

INSTALLATION WALKTHROUGH:

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	7_16 FISHWIRE	7/16" FISHWIRE
2	4	CM-SP2	.250 x .88 x 2.25" SQUARE HOLE SPACER
3	4	7/16-14 x 1 1/4	CARRIAGE BOLT
4	4	7/16-14	HEX FLANGE NUT

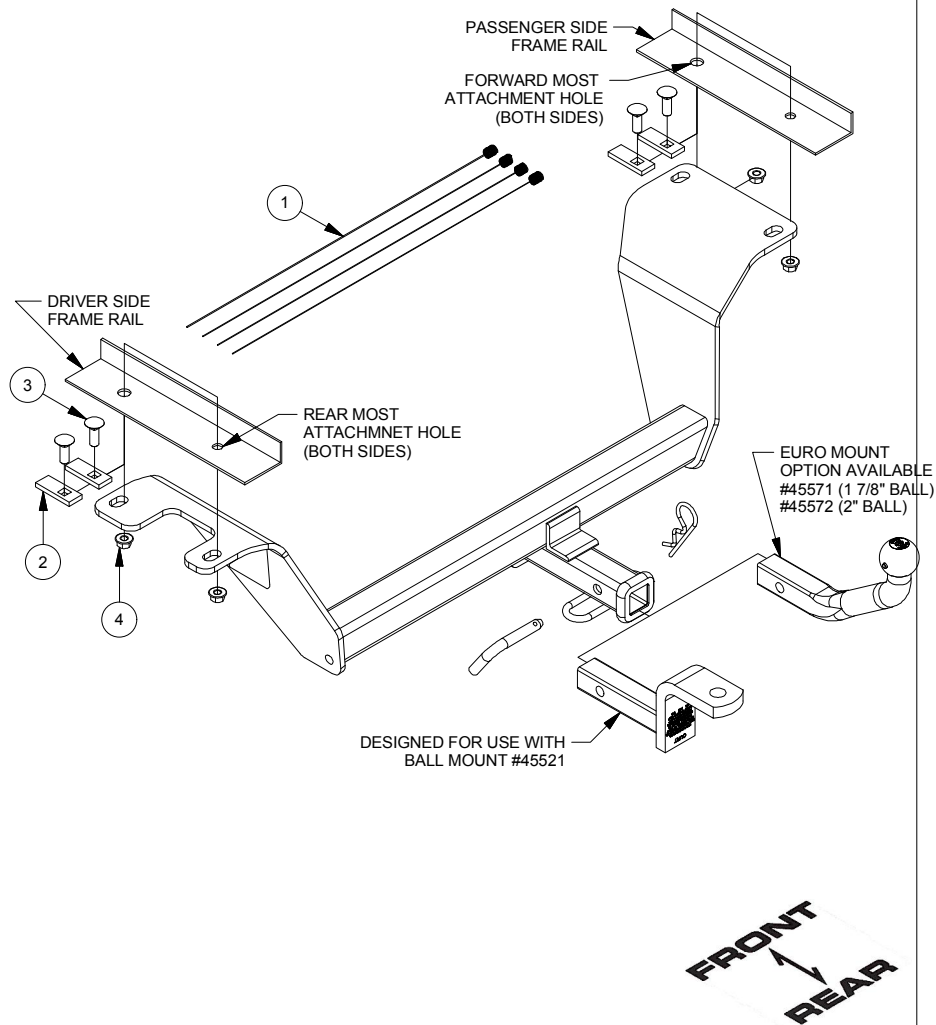

1. Locate on driver side frame rail and temporarily remove emissions canister by removing (1) fastener using 10mm socket.

NOTE: If present remove frame rail plug, to access rear mounting point on driver side.



2. On passenger side lower exhaust by removing (2) exhaust isolators, using isolator removal diagram, to expose heat shield. Remove (4) speed nuts to lower heatshield from frame rail.





INSTALLATION WALKTHROUGH:



3. Trim heat shield as shown in the heat shield diagram.
NOTE: All dimensions are approximate, confirm fit prior to trimming





4. Enlarge forward most attachment hole on both sides using a die grinder. Use hole enlargement diagram as a reference.

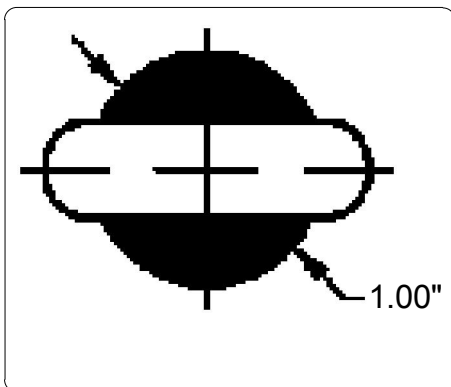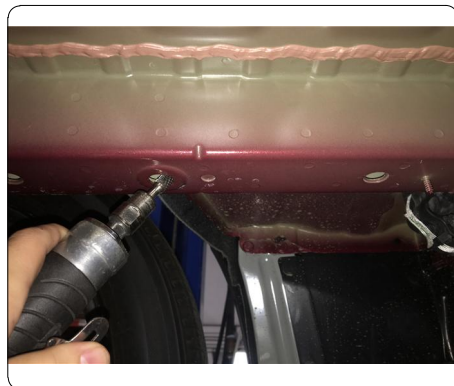

5. Fishwire (1) carriage bolt and (1) CM-SP2 spacer through enlarged hole and out rearmost hole, on each side, as shown in the Fishwire Technique Diagram.

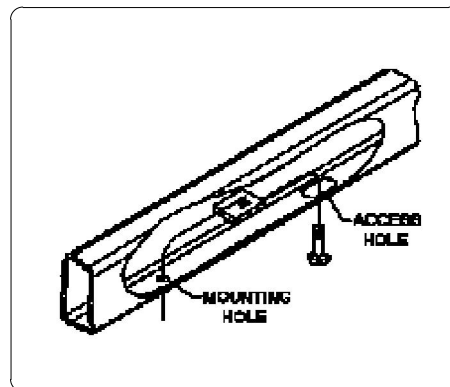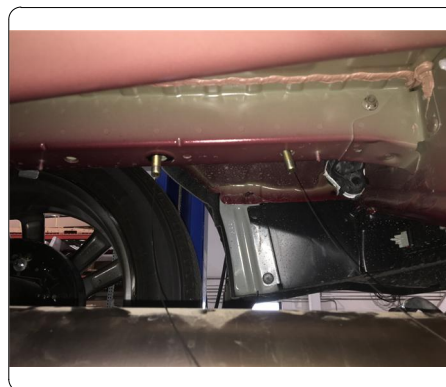

6. Reverse fishwire (1) carriage bolt and (1) CM-SP2 spacer through enlarged hole, on each side, as shown in the Reverse Fishwire Diagram.

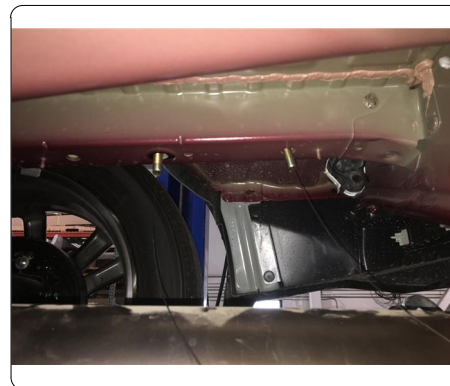
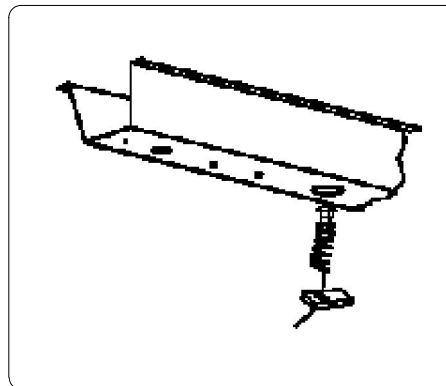


INSTALLATION WALKTHROUGH:

7. Reinstall trimmed heatshield and raise hitch into position.



8. Torque all 7/16 hardware to 59 ft-lbs. Reinstall emissions canister, raise exhaust into position.

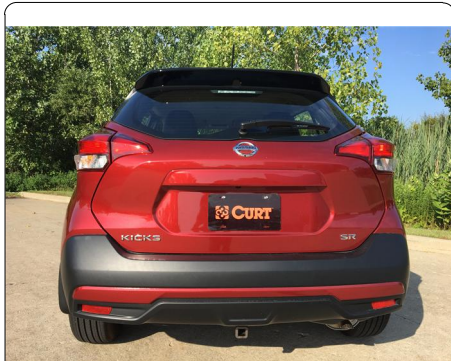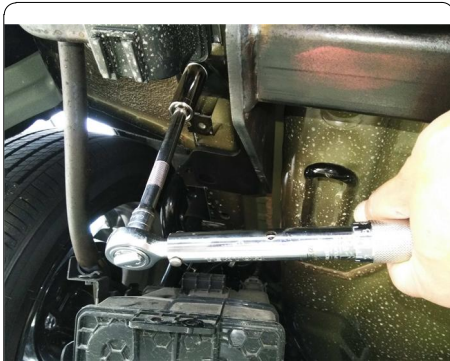

For more information log onto www.curtmfg.com

TOWING SAFETY INFORMATION


Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.

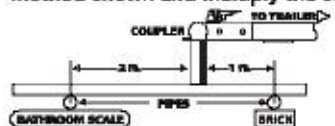

Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

Weight Distribution / WD

Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.



Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.

How Much Can You Safely Tow?

TONGUE WEIGHT (lb)	1000	2000	3000	4000	5000	6000	7000	8000	9000	10,000	12,000
Tongue weight should be about 10 to 15 percent of the gross trailer weight.											
TRAILER TYPE	CLASS 1										
	CLASS 2										
	CLASS 3										
	CLASS 4										
	CLASS 5										
Coupler	1 1/2"	1 3/4"	1 3/4"	1 3/4"	1 3/4"	1 3/4"					
 1 1/2"	1100	1200	1300	1400	1500	1600					
 1 3/4"	2100	2400	2700	3000	3300	3600	3900	4200	4500	4800	
 1 3/4"	2800	3200	3600	4000	4400	4800	5200	5600	6000	6400	
30th Mile											
											
Refer to owner's manual for towing capabilities and limitations.											

11563

2/8/2019

NISSAN KICKS

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.
WARNING: ALL NON-TRAILER (WHEEL-LESS) LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.




WARNING: ** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY **
WARNING: * DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY *****




FOR MORE INFORMATION LOG ONTO WWW.CURTMFG.COM
HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	7_16 FISHWIRE	7/16" FISHWIRE
2	4	CM-SP2	.250 x .88 x 2.25" SQUARE HOLE SPACER
3	4	7/16-14 x 1 1/4	CARRIAGE BOLT
4	4	7/16-14	HEX FLANGE NUT

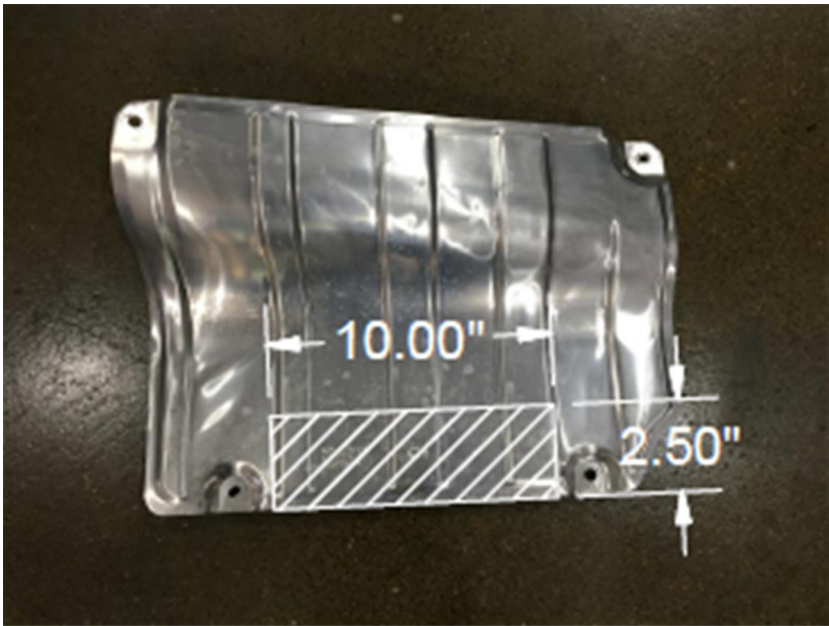

HEAT SHIELD
TRIM DIAGRAM

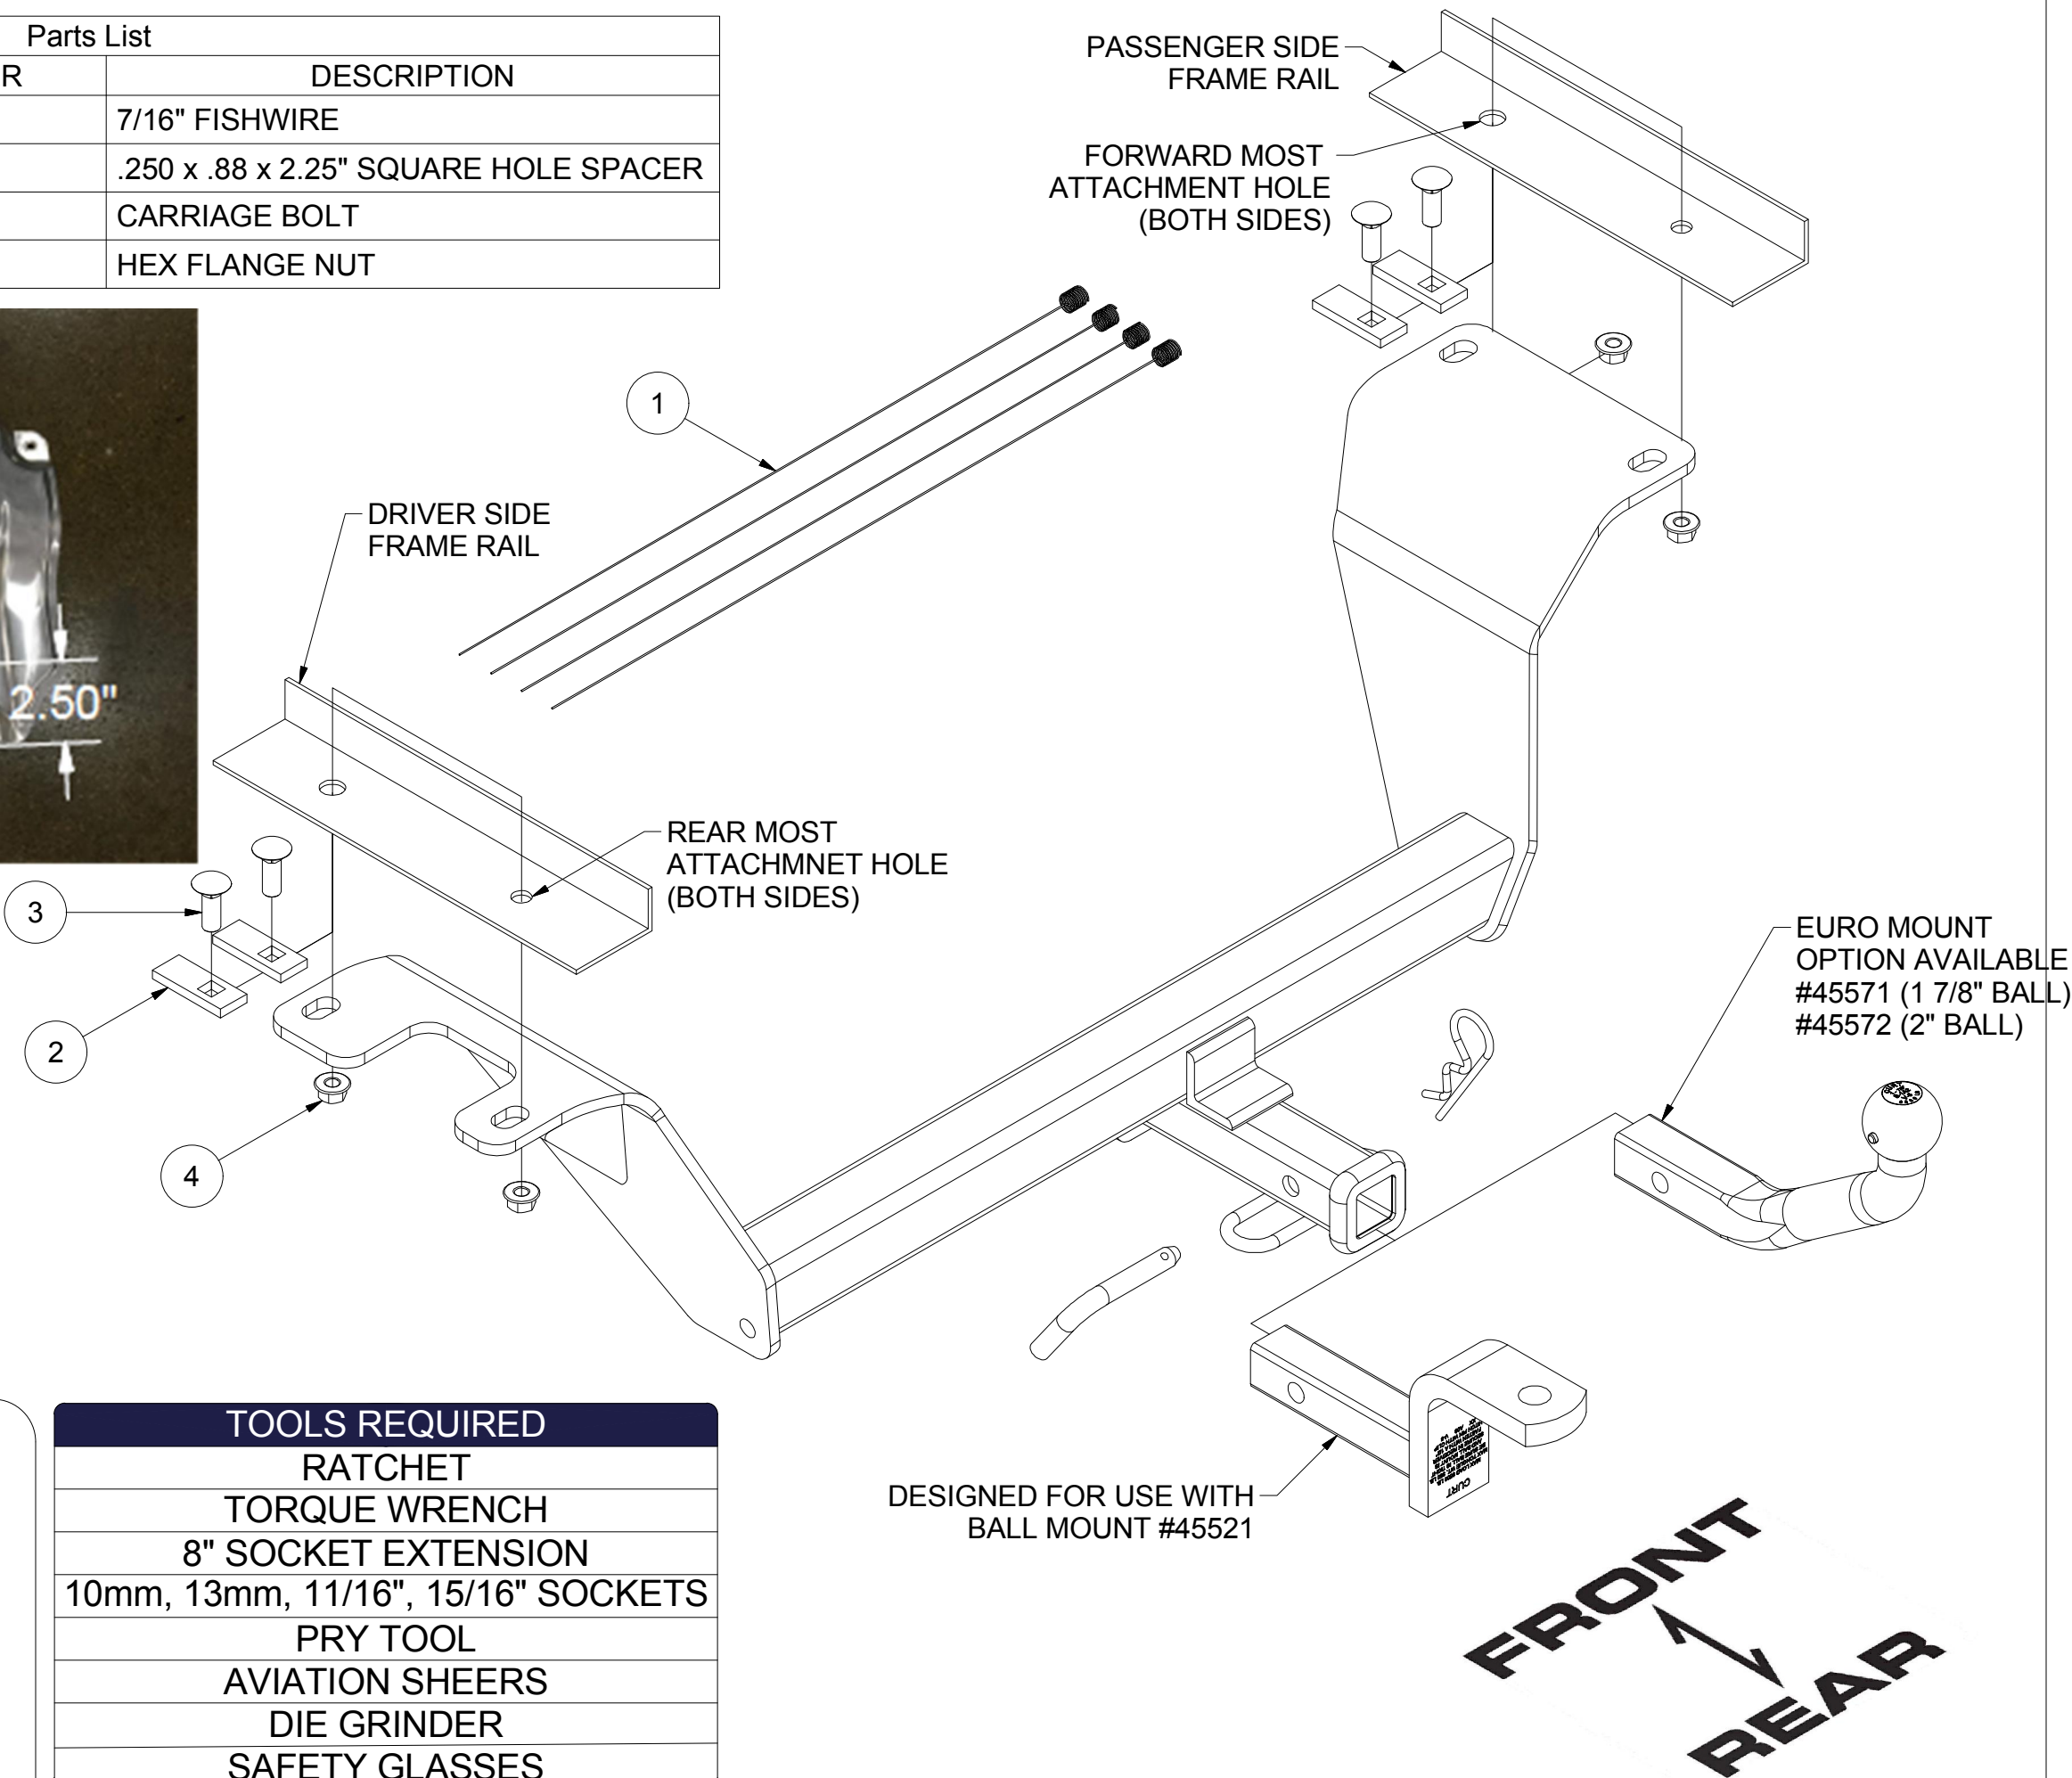

HITCH WEIGHT: 26 LBS.

INSTALL TIME

PROFESSIONAL: 30 MINUTES

NOVICE (DIY): 60 MINUTES

INSTALL NOTES:

- NO DRILL
- TRIM HEAT SHIELD
- TEMPORARILY REMOVE PARTS

TOOLS REQUIRED
RATCHET
TORQUE WRENCH
8" SOCKET EXTENSION
10mm, 13mm, 11/16", 15/16" SOCKETS
PRY TOOL
AVIATION SHEERS
DIE GRINDER
SAFETY GLASSES

INSTALLATION STEPS

1. Locate on driver side frame rail and temporarily remove emissions canister by removing (1) fastener using 10mm socket.
NOTE: If present remove frame rail plug, to access rear mounting point on driver side.
2. On Passenger side lower exhasut by removing (2) exhaust isolators, using isolator removal digram, to expose heat shield. Remove heat shield by removing 4 speed nuts.
3. Trim heat shield as shown in the Heat Shield Trim Diagram.
NOTE: All dimensoins are approviamate, confirm fit prior to trimming.
4. Enlarge forward most attachment hole using a die grinder. Use hole enlargement diagram as a reference.
5. Fishwire 7/16 hardware through enlarged hole and out rear most attachment hole. Use fishwire diagram as a reference.
6. Reverse fishwire 7/16 hardware through enlarged hole. Use reverse fishwire diagram as a reference.
7. Reinstall trimmed heat shield and raise hitch into position.
8. Torque all 7/16 hardware to 59 ft-lbs. Reinstall emissions canister, raise exhaust into vehicle position.



Scan
for more
information

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.
This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.