




INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50
STATE LEGAL. SEE KNFILTERS.COM FOR CARB
STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

INSTALLATION INSTRUCTIONS

57-9040
TOYOTA
2016-19 Land Cruiser
V8-5.7L

NOTE: This kit was not designed
to fit vehicles with a body lift.

TOOLS NEEDED:
ratchet
10mm socket
flat blade screw driver
14mm wrench

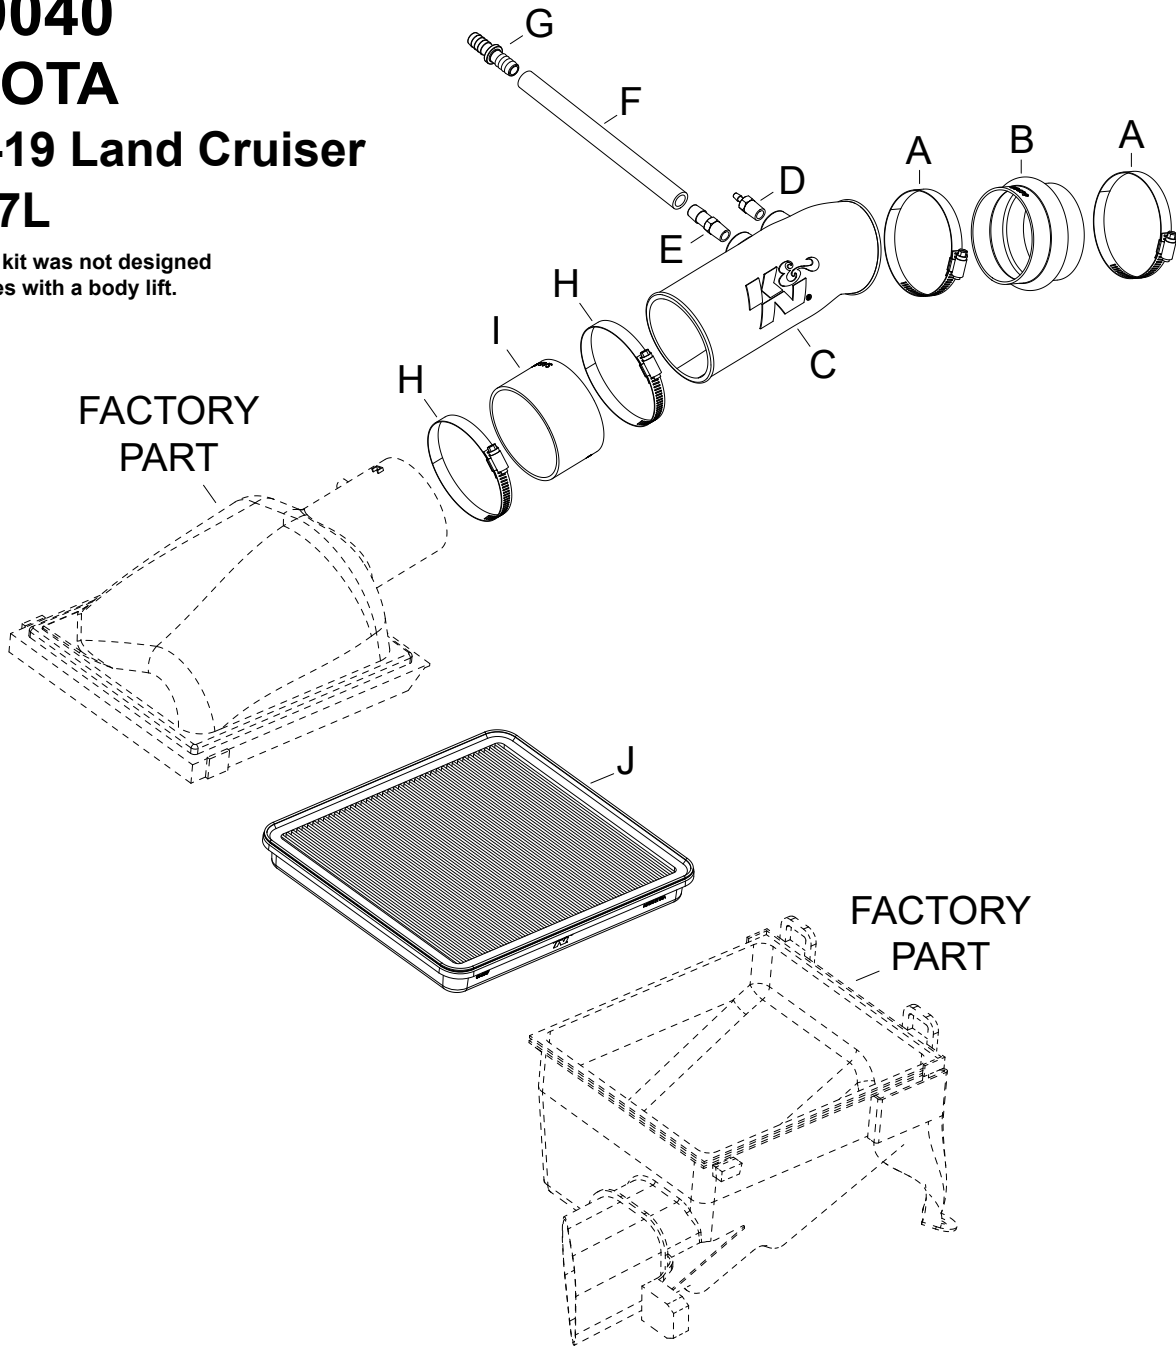

PARTS LIST:			
	Description	Qty.	Part #
A	HOSE CLAMP; #56	2	08620
B	HOSE; 3-1/2" ID X 2-1/2" L	1	08699
C	TUBE; FIPK 57-9040, LL	1	087335A
D	VENT; STRT, 3/16 BARBED	1	080021
E	VENT; STRT 1/2" HOSE, 1/4"	1	080022
F	HOSE; 1/2" ID X 9" L	1	08401
G	HOSE MENDER; 1/2" BARBED	1	08686
H	HOSE CLAMP; #60	2	08624
I	HOSE; 3-3/4" ID X 2-1/4" L	1	08760
J	AIR FILTER	1	33-2387

If you need any assistance please call 1-800-858-3333 to speak with a representative
in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE
MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.
NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Lift up and remove the decorative engine cover.



3. Disconnect the crank case vent hose and fuel pressure regulator vent hose from the factory intake tube.



4. Loosen the hose clamps securing the factory intake tube to the throttle body and air filter housing and then remove the factory intake tube from the vehicle.

NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.



5. Release the clips securing the upper air filter housing to the lower air filter housing. Lift up the upper air filter housing and remove it from the vehicle. Remove the factory air filter. Install the K&N® air filter into the lower air filter housing and then reinstall the upper air filter housing but do not secure at this time.



6. Install the provided coupling hose (08760) onto the air filter housing and secure with the provided hose clamp.



7. Install the provided hump coupler (08699) onto the throttle body and secure with the provide hose clamp.



8. Install the provided NPT vent fittings into the K&N® intake tube as shown.
NOTE: Plastic NPT fittings are easy to cross thread. Install the vent fitting “hand” tight, then turn it two complete turns with a wrench.




9. Lift up the upper air filter housing, install the K&N® intake tube into the coupling hoses and then reinstall the air filter housing. Secure the air filter housing with the factory clips, adjust the intake tube for best fit and then secure with the provided hose clamps.



10. Install the provided hose union into the provided crank case vent hose.



11. Connect the union into the factory crank case vent hose and then connect the open end onto the fitting installed into the K&N® intake tube. Then connect the fuel pressure regulator vent hose to the fitting installed in the K&N® intake tube.

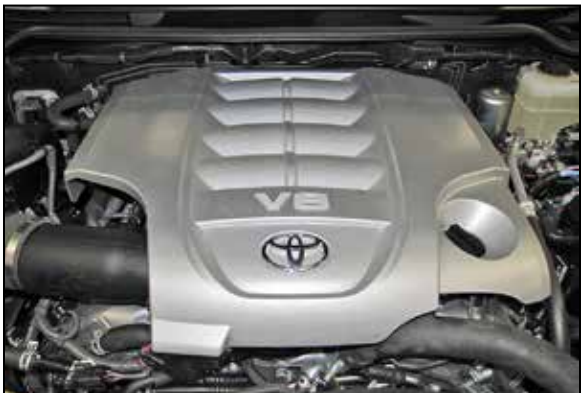

12. Reinstall the decorative engine cover.



13. Reconnect the vehicle's negative battery cable. Double check to make sure everything is tight and properly positioned before starting the vehicle.

14. The C.A.R.B. exemption sticker, (attached), must be visible under the hood so that an emissions inspector can see it when the vehicle is required to be tested for emissions. California requires testing every two years, other states may vary.

15. It will be necessary for all K&N® high flow intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

ROAD TESTING:

1. Start the engine with the transmission in neutral or park, and the parking brake engaged. Listen for air leaks or odd noises. For air leaks secure hoses and connections. For odd noises, find cause and repair before proceeding. This kit will function identically to the factory system except for being louder and much more responsive.

2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.

3. If road test is fine, you can now enjoy the added power and performance from your kit.

4. K&N Engineering, Inc., requires cleaning the intake system's air filter element every 100,000 miles. When used in dusty or off-road environments, our filters will require cleaning more often. We recommend that you visually inspect your filter once every 25,000 miles to determine if the screen is still visible. When the screen is no longer visible some place on the filter element, it is time to clean it. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE KNFILTERS.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.