

NRTTNB

Rear suspension package Ensemble pour suspension arrière Ensemble para suspensión de trasero

INSTALLATION INSTRUCTIONS

- Raise vehicle allowing the axle to hang freely.
- Remove existing bump stop by prying out of bump stop cup.
- Remove existing OE bolt that attach the OE cup to frame.
- Position Timbren spring assembly into bump stop cup as shown in Diagram.
- Ensure Timbren assembly is properly seated in bump stop cup.
- Tighten Timbren assembly and OE cup using Timbren supplied fasteners.
- Lower vehicle.

Do not exceed vehicle manufacturer's recommended axle weight rating. Check for AEON® interference with vehicle components - Under load AEON® will "expand" in diameter.

INSTRUCTIONS DE MONTAGE

- Soulever le véhicule pour permettre à l'essieu de pendre librement.
- Enlevez la butée de bosse existante en soulevant la cuvette.
- Retirez le boulon OE existant qui attache la coupelle OE au cadre.
- Positionnez le ressort Timbren dans la coupelle de butée, comme indiqué sur le schéma.
- Assurez-vous que l'assemblage Timbren est correctement placé dans la coupelle anti-bosses.
- Serrez l'assemblage Timbren et la coupelle d'origine avec les fixations fournies par Timbren.
- Abaisser le véhicule.

Ne pas dépasser le poids nominal sur l'essieu recommandé par le fabricant du véhicule. Vérifier que le ressort AEON® n'a pas d'incidence sur d'autres pièces du véhicule - Le ressort AEON® augmentera son diamètre avec la charge.


INSTRUCCIONES DE INSTALACION

- Levante el vehículo permitiendo que el eje cuelgue libremente.
- Retire el tope existente haciendo palanca en la tapa del tope.
- Retire el perno existente de OE que une la copa OE al marco.
- Coloque el ensamble del resorte Timbren en la taza de tope de tope como se muestra en el Diagrama.
- Asegúrese de que el conjunto de Timbren esté correctamente asentado en la taza de tope de tope.
- Apriete el conjunto Timbren y la copa de OE al marco utilizando los sujetadores provistos por Timbren.
- Bajar vehículo.

No exceda la carga nominal en el eje recomendada por el fabricante del vehículo. Compruebe que no haya interferencia entre el resorte AEON® y los otros componentes del vehículo. Bajo carga, el resorte AEON® se ampliará en diámetro.

Ref. = Reference = No. de référence = Núm. de referencia
Part = Part #. = No. de pièce = Núm. de pieza
Qty. = Quantity = Quantité = Cantidad

Ref	Part	Qty
1	A00535-65Q30	2
2	A16140-003	2
3	F11546-350	2

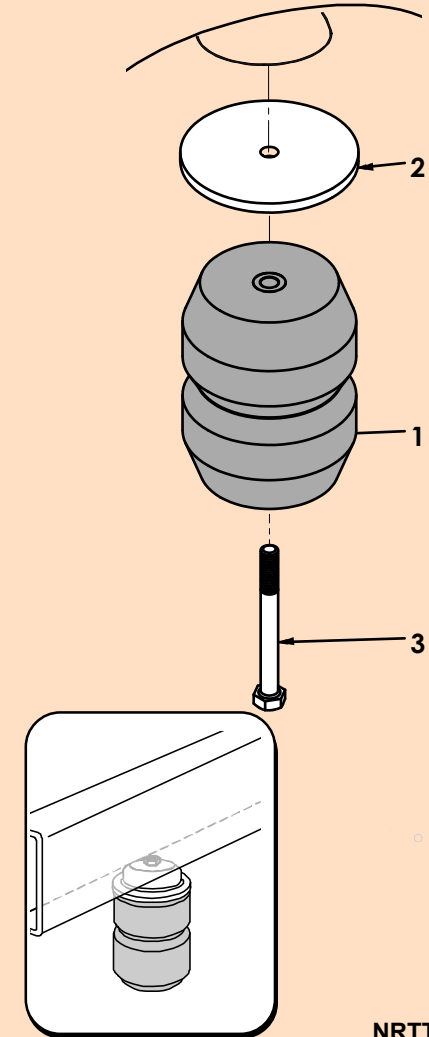

NRTTNB **TIMBREN**

NRTTNB

TIMBREN INDUSTRIES INC.

www.timbren.com

ASSEMBLY NOTES:

PART NUMBER	DESCRIPTION	QTY	LOCATION
F11546-350	HCS M10 x 80 x 1.5 Gr 8.8 Z	2	I2C
A00535-65Q30	Hollow Rubber Spring	2	C7B
A16140-003	DISC 4 OD x 13/32 ID x 3/16 THK	2	D20B
B90200-CR	SMALL REAR BOX - 9.5 x 7 x 5.5	1	A--E
B10000	8" X 12" BUBBLE FOR KITS	1	
B00029-010	BARCODE LABEL FOR KIT	1	

Issued: 6/21/2019

Clearance Instructions:

Rear SES Kits for Pick-Ups and Vans should have a 1/2" to 1-1/2" gap between the rubber spring and contact point when empty.

A partial load, or vehicle accessories will reduce or eliminate the gap.

Front SES kits are usually in full contact.

Medium and Heavy-Duty Trucks, Trailers and Motorhomes will be in constant contact, and have no gap.

Lifetime Warranty:

Timbren SES Kits are warranted against defects in material and workmanship, under normal use and service, for the life of the vehicle on which the kit was originally installed. The warranty is not transferable and proof of purchase is required. The warranty is limited to the replacement of the failed part.

TIMBREN will not be responsible for any labour or freight charges involved in the replacement of any product. TIMBREN shall be entitled to make its own inspection to determine the validity of the claim. TIMBREN shall not be liable nor warranty the product in the event of alteration, misuse, overload, negligence or damage caused by others.

If ride or performance of our product is unsatisfactory in any way, please call: 1-800-263-3113 or email sales@timbren.com